


ATTACHMENT OPTIONS:NAILING FIN

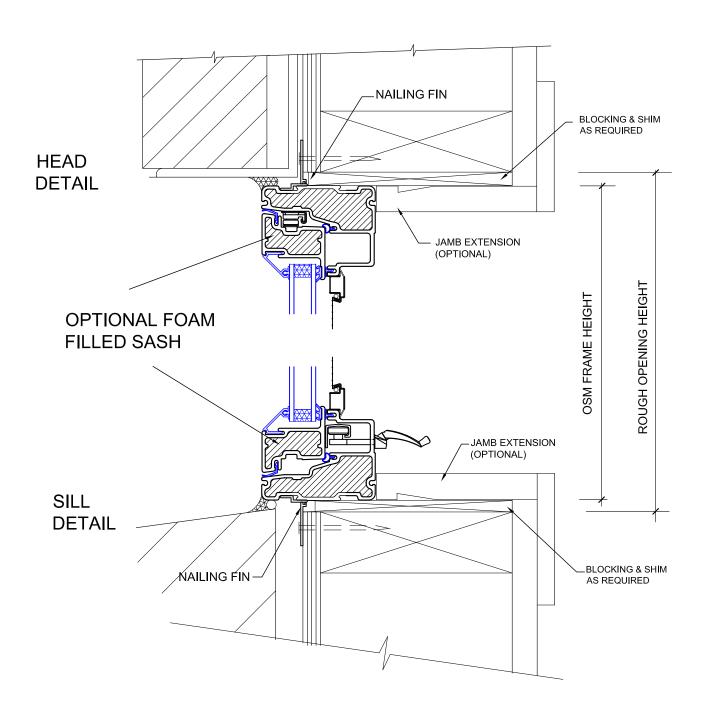


VERTICAL SECTION THRO' CASEMENT

NOTE:
USE LOW EXPANSION
FOAM TO INSULATE GAP
BETWEEN ROUGH
OPENING AND FRAME.




300 SERIES ATTACHMENT OPTIONS:STRAP ANCHOR

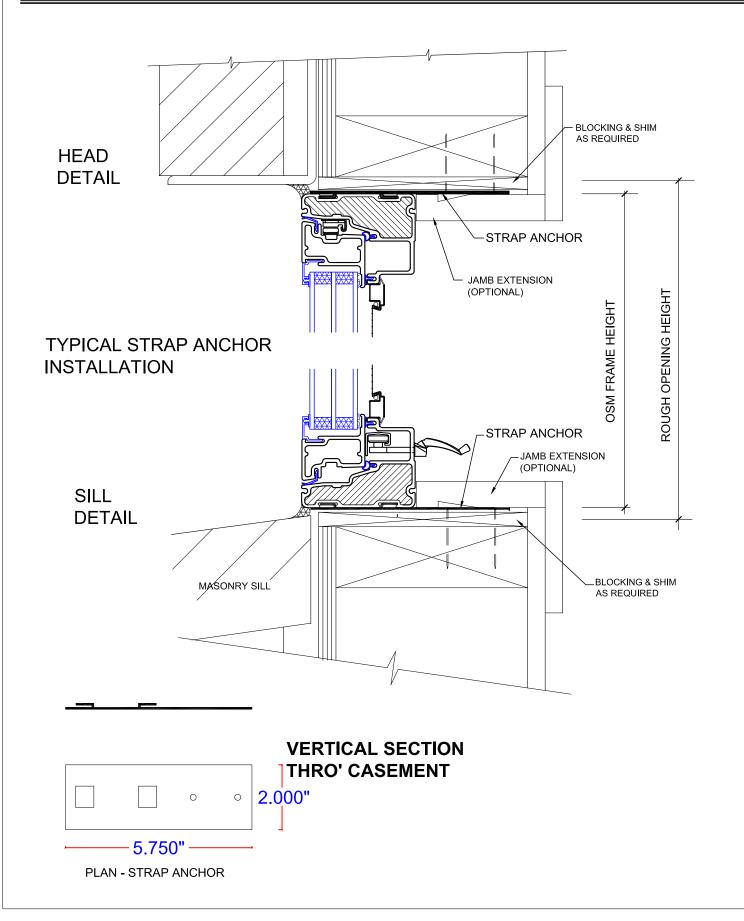




ATTACHMENT OPTIONS:BRICKMOULD WITH NAILING FIN

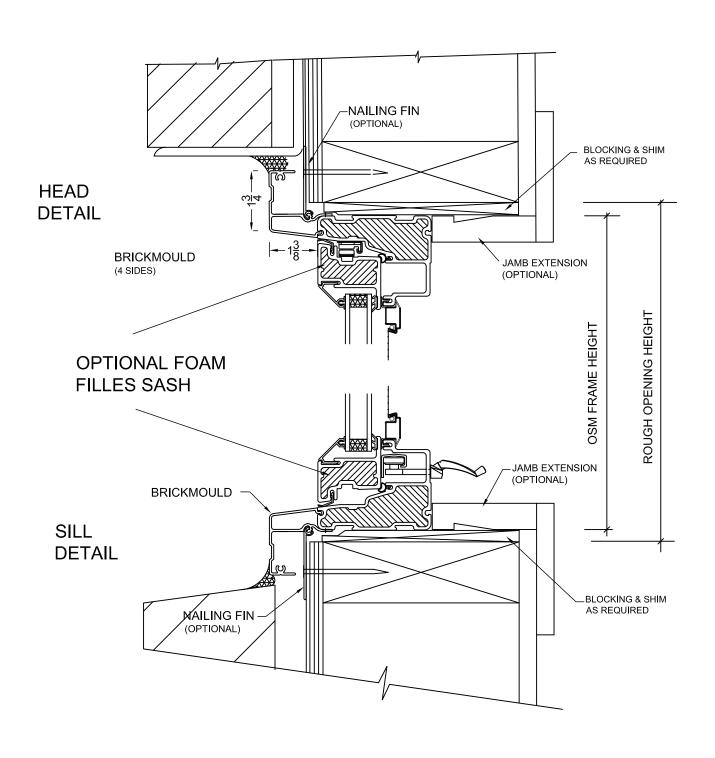

VERTICAL SECTION THRO' CASEMENT



TRIMLINE BRICKMOULD WITH SNAP ON COVER

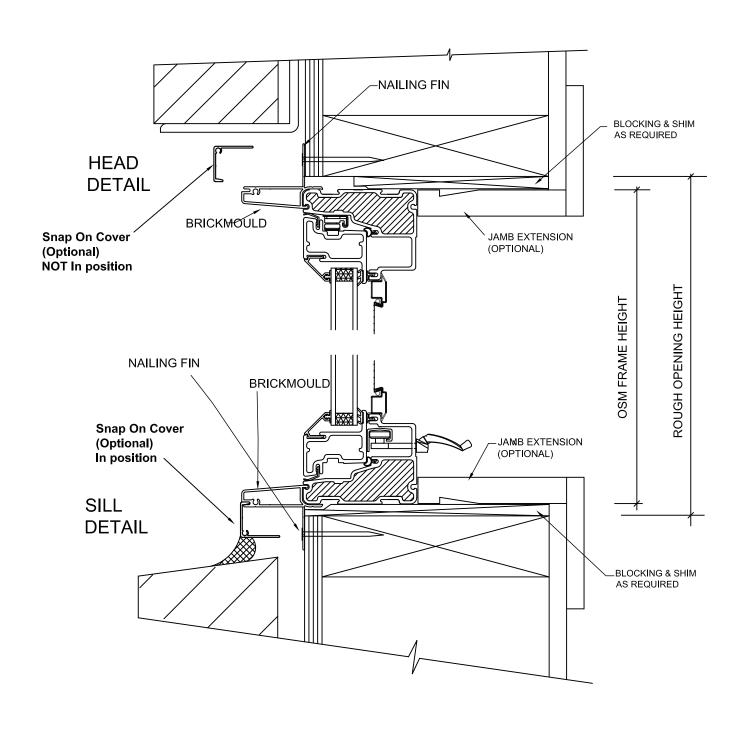


VERTICAL SECTION THRO' CASEMENT



CASEMENT WINDOW


With Trimline Brickmould

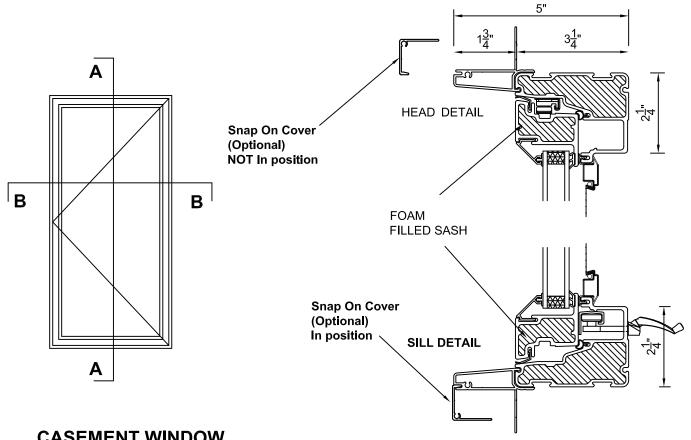

CASEMENT WINDOW

EXTERIOR VIEW CLOSED BACK FRAME

SECTION A-A

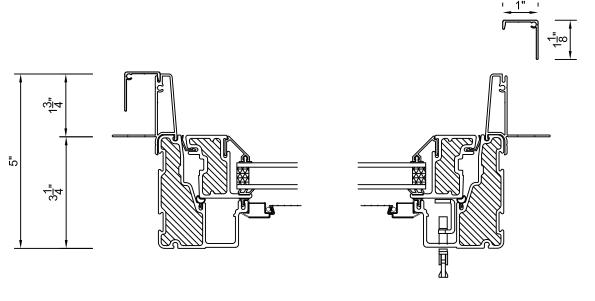


JAMB DETAIL

SECTION B-B




CASEMENT WINDOW

With Trimline Brickmould and Trimline Extension

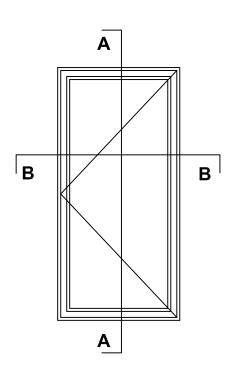


CASEMENT WINDOW


EXTERIOR VIEW CLOSED BACK FRAME

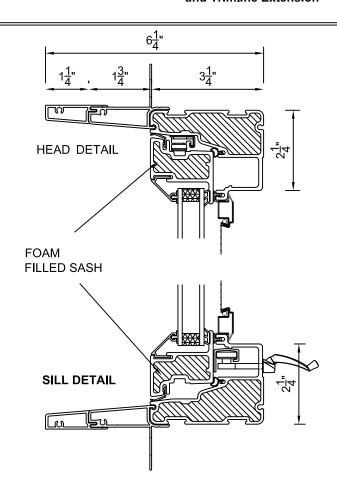

SECTION A-A

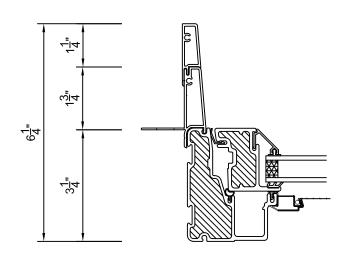

JAMB DETAIL

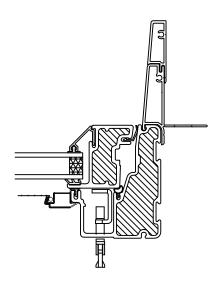

SECTION B-B